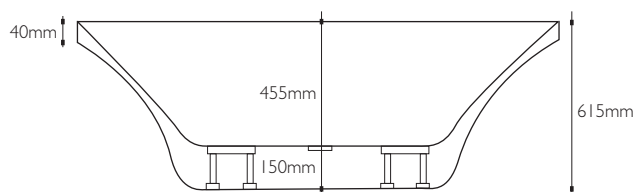
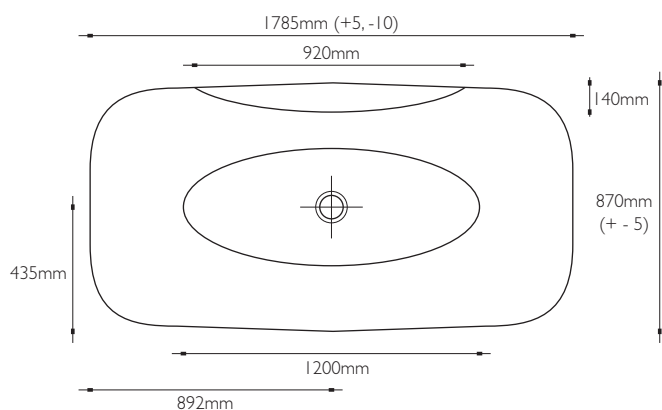


**ALLURE BATH INSTALLATION INSTRUCTIONS**

Your Marbletrend Allure bath is a two-piece unit, please inspect before installation. No claims will be accepted after installation.

1. As a starting point it is recommended the feet on the bottom of the inner shell be level and flush with the outer shell. To do this the complete bath needs to be turned upside down. (Place some protection on the floor to ensure the bath surface incurs no damage).
2. Adjust the feet on the bottom of the inner shell to come level and flush with the bottom the outer shell, this can be done by loosening the nut against the metal frame and winding the foot up or down to suit.
3. While the bath is still upside down pre fit the outside shell to the inner shell, this is achieved by lining up the pre-drilled holes in the outer shell with the timber blocks located on the underside rim of the inner shell. Using a flat head screw fix outer shell to inner shell (do not over tighten screws as damage may occur to outer shell).

FITTING OF BATH TO FLOOR

4. Separate outer shell from inner shell and position outer shell to floor, once the position of the bath has been determined, mark and drill some fixing holes in the bottom of the outer shell to take a screw (For timber floors it is recommended to use 8 gauge flat head screws, for concrete floors it is recommended to use 6mm dyna bolts).
5. Trail fit inner shell to outer shell and ensure all 4 feet are touching the ground, adjust feet if necessary.
6. Remove inner shell and fit waste outlet to inner shell.
7. Place a generous bead of silicone on each of the feet and carefully lift inner shell back into position over outer shell.
8. Fix outer shell to inner shell using flat head screws (do not over tighten as damage may occur to outer shell).
9. Connect trap to waste outlet. (For timber floor connect from underneath floor, for concrete floor glue installation is recommended). It is recommended a plumber is consulted for concrete floor installation.

IT IS RECOMMENDED THE BATH NOT BE USED FOR 24 HOURS TO ENSURE SILICONE ON THE FEET OF THE BATH HAS FULLY CURED.

RNS63741_08015

HEAD OFFICE VIC

22 JERSEY ROAD
BAYSWATER VIC 3153
T. (03) 9729 6777 F. (03) 9729 0115

**NSW/ACT
QLD
TAS
WA**

T. (02) 9679 8888
T. (07) 3200 7555
T. (03) 6334 2992
T. (08) 9240 7299

F. (02) 9679 8700
F. (07) 3200 5777
F. (03) 6334 2994
F. (08) 9240 6144

**SA
DARWIN
TOWNSVILLE
CAIRNS**

T. (08) 8387 7344 F. (08) 8387 7355
T. (08) 8948 5062 F. (08) 8985 3465
T. (07) 4775 5784 F. (07) 4725 8480
T. (07) 4054 7890 F. (07) 4033 1711