


# vanity installation instructions

**WE RECOMMEND THAT A QUALIFIED TRADE PERSON INSTALL YOUR VANITY.  
DO NOT INSTALL VANITY UNIT IF DAMAGED**

1. Do not tile the vanity in. Tiles should extend behind and below your cabinet.
2. Measure your pipe work and transfer the measurements to the back of your vanity unit, (be sure to double check your measurements).
3. Drill holes in the back/base of your vanity unit ensuring enough clearance for pipe work to fit through.
4. Ensure the cabinet is installed level and square. When fixing unit to an out of square wall, packing may be required behind the back rail and below the cabinet. To fix the unit to the wall, pre-drill holes through back rail. Check the unit is level, then fix screws to wall studs. (If a stud cannot be located a wall anchor may be required). Note: For wall hung unit pre-drill hole in 6 points through solid back of unit. Ensure fixing to stud or noggin.  
**At no time should wall anchors be used to support wall hung vanity units.**
5. Fit vanity top to vanity cabinet by placing a bead of silicone around the top of the vanity cabinet. Place the vanity top on the cabinet and centre it while silicone is still curing. The area where the vanity meets the wall and floor should be properly sealed with silicone. (This will help prevent any water penetration).
6. Connect water supply lines and waste outlet and adjust doors if required.

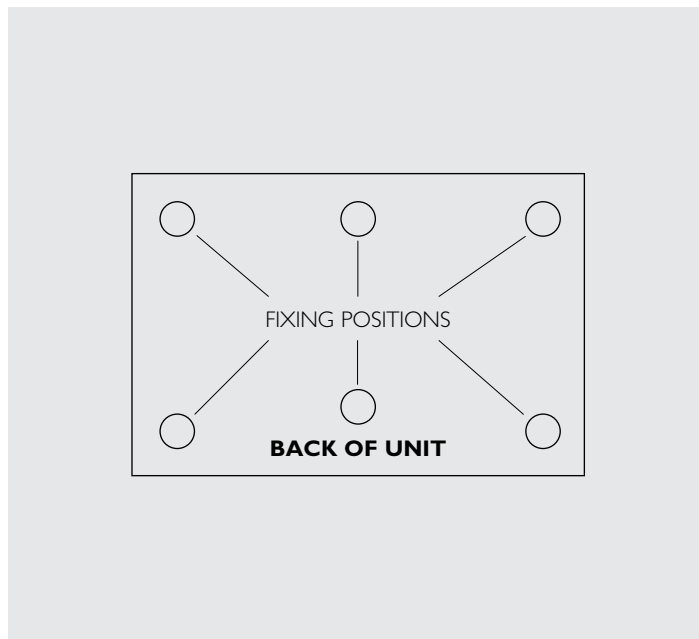

## WALL HUNG VANITY UNITS

Wall hung vanity units are required to be fixed to a stud or a noggin, and have firm fixing. Drill a pilot hole through the back of the vanity unit to line up with a stud or noggin and fix in 6 places as per diagram left. It is recommended for timber walls an 8 gauge flat head screw and for solid walls a 6mm dynabolt be used to firmly secure the select vanity to the wall.

**At no time should wall anchors be used to support wall hung vanity units.**

**Do not stand or sit on wall hung units.**

## CARE INSTRUCTIONS GUIDE

Thank you for purchasing a Marbletrent product.

### VANITY TOP

Warm soapy water or mild household cleaners will be sufficient to remove most marks or residue. For persistent stains or to rejuvenate the surface use Marbletrent Ultragloss polish.

### CABINET (VINYL WRAP, LACQUER OR LAMINATE UNITS)

A small amount of soapy water and a soft cloth can be used to keep the cabinet clean. Dry with a cloth or chamois.

### WOOD UNITS

While your vanity is covered with a quality clear membrane for additional protection we suggest a light coat of furniture wax or similar as extra protection. Clean with a soft cloth and keep vanity dry.

### SOLID TIMBER UNITS WITH TIMBER TOPS

The vanity cabinet must be kept dry. While the finish on the cabinet is protected with quality clear membrane, your vanity may be installed in a variety of areas that expose it to the risk of water damage. We recommend that you periodically apply a coat of microcrystalline wax to maintain its finish and provide a barrier between the cabinet and water. Use a soft damp cloth for regular cleaning.

**Do not use cleaning products such as, harsh abrasive cleaners, dry cleaning fluids, glass cleaning sprays, or ammonia compounds.**

**We advise that you refer to any cleaning product warning labels.**

### HINGE ADJUSTMENTS

Movement during installation of your vanity unit or uneven floors may result in a uneven gap appearing in your vanity doors.

To adjust doors simply use a screwdriver turning clockwise or anti-clockwise to adjust the alignment. Screws 1 and 2 moves door up or down. Screw 3 moves left and right. Screw 4 moves in and out.

