


▼ TEMPLATE CUTOUT LINE ▼

▲ TEMPLATE CUTOUT LINE ▲

▲ TEMPLATE CUTOUT LINE ▲

SELECT SQUARE VESSEL INSTALLATION INSTRUCTIONS

1. Place cut out template over basin counter and tape into position.
2. Check position is correct and there are no obstructions.
3. Mark around template.
4. Drill 18mm starter hole for jigsaw on the inside of the line (see diagram) and then proceed to cut **ON** the line. Please note: subject to vessel size variations.
5. Fit tapware and waste to basin.
6. Trial fit basin in counter top to ensure correct fit.
7. Apply bead of waterproof sealant around outside edge of cut out.
8. Clean excess sealant from around basin with damp soft cloth.
9. Please allow a period of 24 hours prior to use.

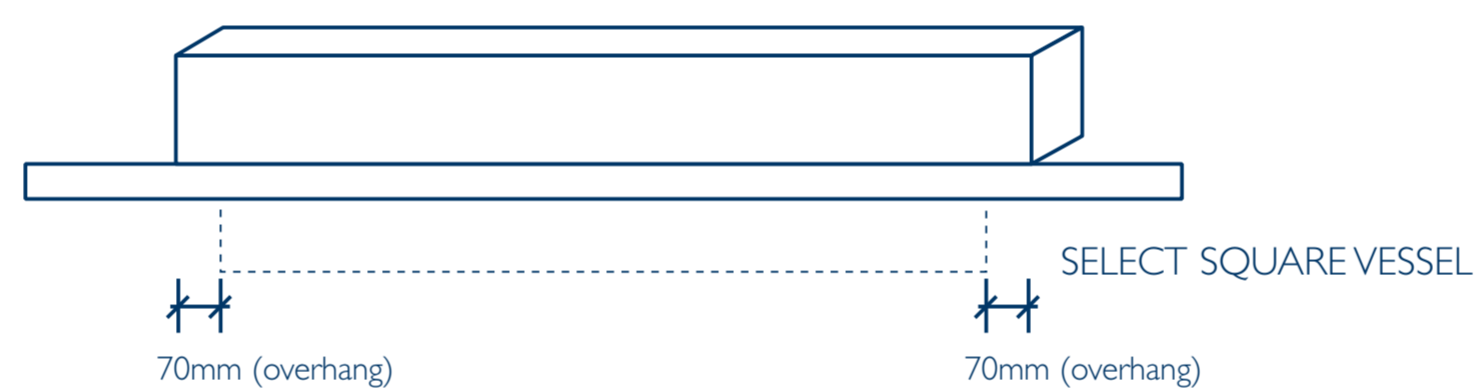

START DRILL HERE

▲ TEMPLATE CUTOUT LINE ▲




MARBLETREND

...a fresh approach

SELECT ROUND VESSEL INSTALLATION INSTRUCTIONS

1. Place cut out template over basin counter and tape into position.
2. Check position is correct and there are no obstructions.
3. Mark around template.
4. Drill 18mm starter hole for jigsaw on the inside of the line (see diagram) and then proceed to cut **ON** the line. Please note: subject to vessel size variations.
5. Fit tapware and waste to basin.
6. Trial fit basin in counter top to ensure correct fit.
7. Apply bead of waterproof sealant around outside edge of cut out.
8. Clean excess sealant from around basin with damp soft cloth.
9. Please allow a period of 24 hours prior to use.

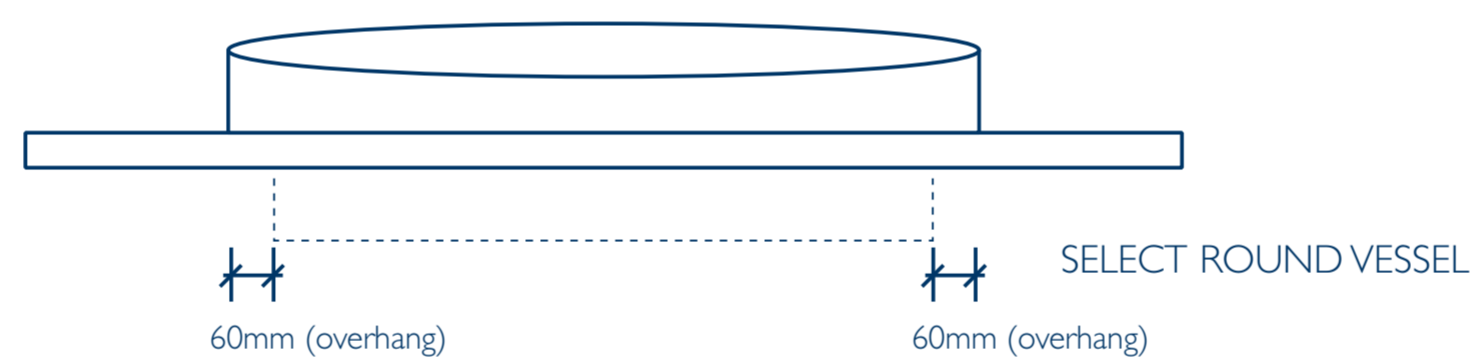

START DRILL HERE



▼ TEMPLATE CUTOUT LINE ▼

▲ TEMPLATE CUTOUT LINE ▲



...a fresh approach