


shower wall installation instructions

TOOLS AND REQUIREMENTS

- > Tape Measure
- > Pencil
- > Clear Non-Acidic Silicone
- > Ruler
- > Caulking Gun
- > Masking Tape
- > Drill
- > Adhesive tubes x 2
- > 35mm Hole Saw

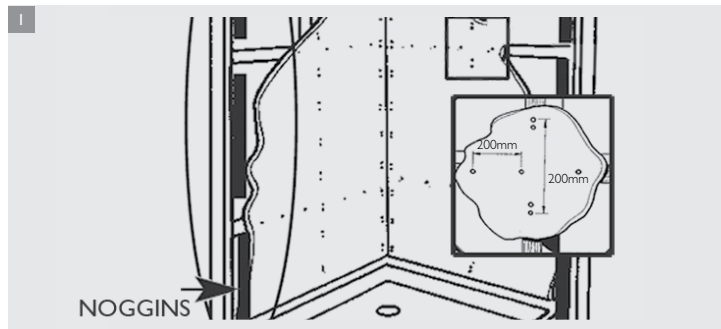


1. Fix Villaboard or WR plasterboard onto framing.

Note: Clouts on wall opposite shower rose must be 200mm centres minimum, and double nailed into studs as shown.


Handy Hint: Before installing the Villaboard or WR plasterboard, it is recommended a noggin is fixed in 3 spots as per figure 1, to allow for shower screen installation.

This is to provide a fixing point for the wall jambs.

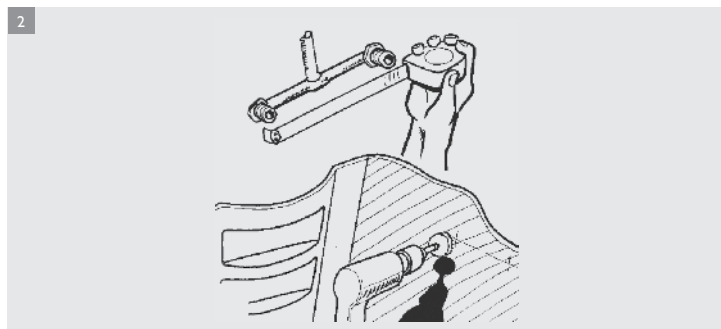


2. Check the measurements of your shower wall, ensure you have the correct size to suit your shower area, once holes are drilled in shower wall no claims will be accepted. Mark and drill holes for shower outlet and tap fittings.

Refer cutting and drilling instructions overleaf.

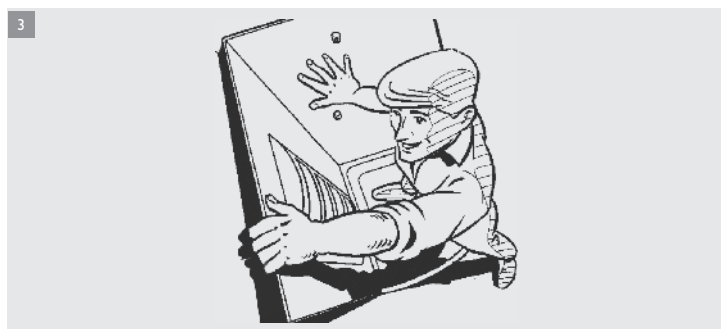

3. Trial fit the shower wall and tape into position using a masking tape, mark very lightly around the outside edge with a pencil to give you the gluing area.

Note: Each shower wall has a protective plastic cover film on the surface. Do not remove this protective cover until the shower wall installation is complete. Ensure plastic cover is removed before the shower screen is installed.

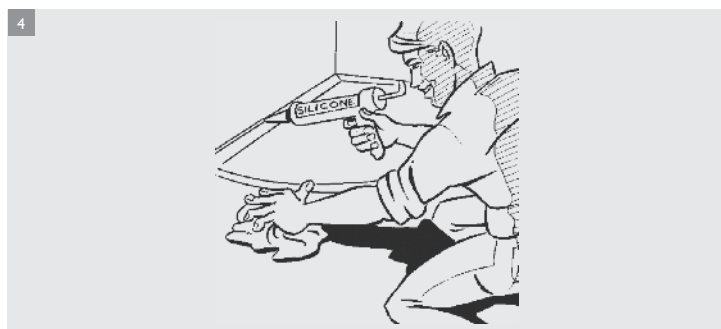

4. Remove shower wall liner, at this stage it is essential that the back side of the shower wall and the surface of the Villaboard or WR plasterboard are wiped with a damp cloth. This will ensure all dust is removed from both surfaces and provide a clean surface for the adhesive. Apply a bead of silicone to the joint between the Villaboard or WR plasterboard and the shower base as per figure 4.



- Apply a 5mm adhesive bead (only use adhesive supplied with wall sheet, do not use any other form of adhesive not recommended by marbletrend) onto the Villaboard or WR plasterboard in vertical lines spaced 100mm apart plus a continuous bead 15mm in from the side and bottom edges of where the shower wall will finish.

- Place shower wall onto Villaboard or WR plasterboard within 10 minutes of applying adhesive and firmly press the entire sheet with your hands so that full contact is achieved. Using a clean cloth continue to rub the shower wall surface until the shower wall has fully adhered to the Villaboard or WR plasterboard. Clean up any uncured adhesive using a dry cloth.



- Once shower wall liner is firmly in position, remove the protective plastic cover film from the shower wall. A bead of non acidic silicone is required between the shower wall and the shower base, take your time to apply this bead carefully. This join MUST be allowed to fully cure before the installation of the shower screen commences. Before tapware and shower rose is fitted, silicone around the tap spindles and the shower rose outlet to ensure a water tight installation.

DRILLING AND CUTTING

Drilling: Small holes can be drilled with a twist drill. Large holes must be drilled with a 35mm hole saw.

Cutting: If for any reason the wall panel requires cutting, use a fine tooth hacksaw and proceed with caution. Edges can be smoothed with a second-cut file and medium-fine sandpaper. If the surface of the wall panel should happen to be damaged, it can be restored by polishing with MARBLETREND Ultragloss Polish.

SHOWER WALL CARE AND CLEANING

Chemicals: DO NOT use harsh abrasive cleaners, gritty scouring powders, scouring pads, dry cleaning fluids, window cleaning sprays, or ammonia compounds. DO NOT use powerful solvents such as acetone, paint thinner naphtha, carbon tetrachloride, nail polish remover or benzene, as they may dull the high gloss surface.

Cleaning: The high gloss finish of the shower wall system requires nothing stronger than ordinary liquid household detergent to preserve the high gloss acrylic surface year after year. For tough soap film and residue we recommend using liquid (non ammonia, non abrasive) household cleaners. We recommend the use of MARBLETREND Ultragloss Polish.

Removal of scratches: In the event of slight scratches in the wall surface MARBLETREND Ultragloss Polish can be used to polish these out.

Caution: The wall panels are of combustible material and naked flames should not be allowed to come in contact with it as ignition may occur.

ADHESIVE CLEAN UP

Adhesive may be cleared off with mineral turps while still wet. Dry material is best removed by peeling or scraping gently with a piece of sharpened softwood.

IMPORTANT: UNDER NO CIRCUMSTANCES SHOULD ADHESIVE BE APPLIED OVER PREVIOUSLY PAINTED OR TREATED WALL SURFACE. FAILURE TO GLUE OR BRACE IN ACCORDANCE WITH THE INSTRUCTIONS MAY RESULT IN SURFACE RIPPLING AND WILL VOID WARRANTY.