




**MARBLETREND**

*...a fresh approach*

## HERITAGE CLAWFOOT BATH INSTALLATION INSTRUCTIONS

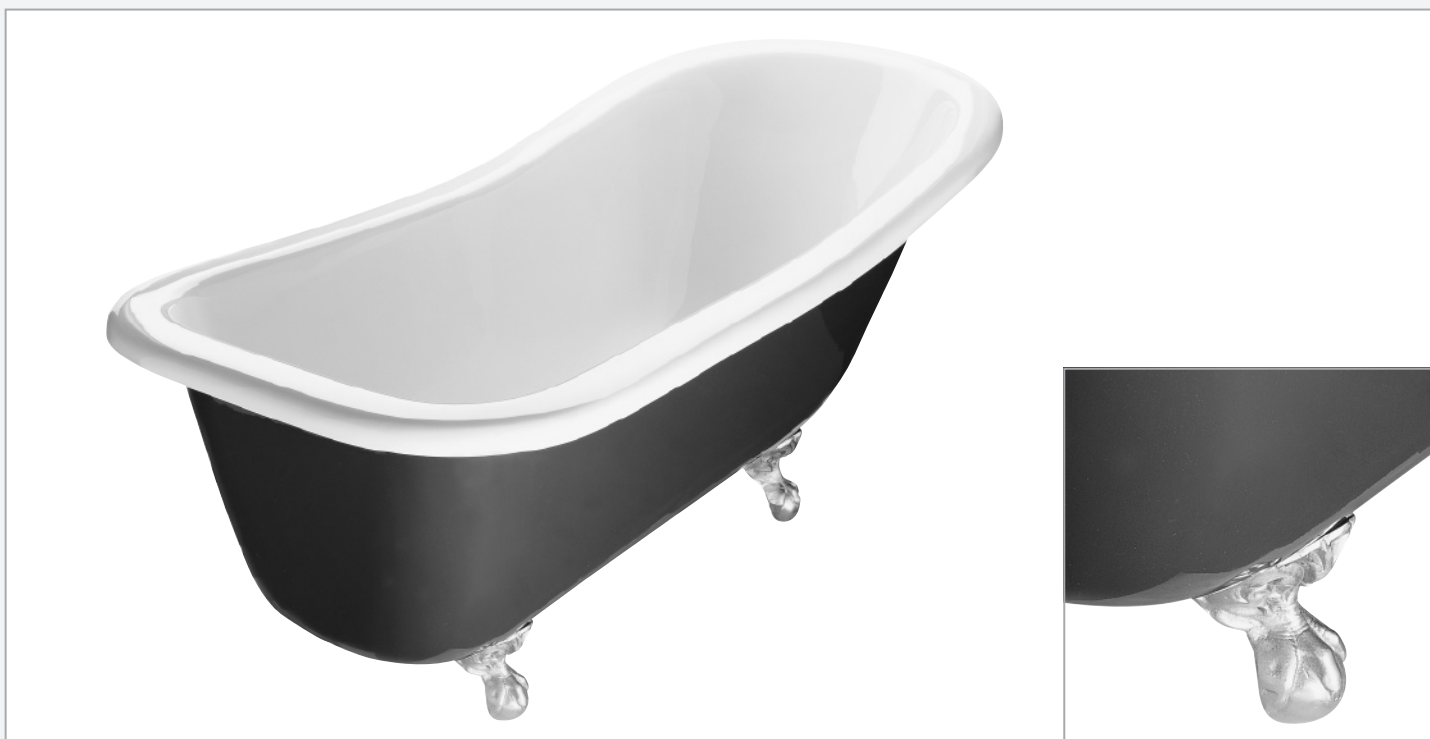

1. Sit bath in position and ensure all 4 feet are touching the ground. Note: Adjustment can be made to feet by undoing the bolt on the underside of foot and adding or removing a washer.

If floor is badly out of level use a grinder with a metal disk to grind foot down to required height.

2. In the bottom of each foot there is a fixing hole. Use a pencil to mark the position for fixing through the locating hole.

### FOR INSTALLATION ON CONCRETE FLOOR

Use 6mm x 40mm Dyna bolts, bolted through claw feet into concrete.

### FOR INSTALLATION ON TIMBER FLOOR

Use 40mm x 10 gauge tex screws with tex heads, screwed through claw feet into timber floor.

**PLEASE NOTE: MAKE SURE BATH AND WASTE PIPE ARE IN CORRECT POSITION, BEFORE FIXING DOWN.**

**WATER TEMPERATURE FROM THE OUTLET SHOULD NOT EXCEED 55 DEGREES.**

RM6702 | 0306

#### HEAD OFFICE VIC

22 JERSEY ROAD  
BAYSWATER VIC 3153  
T. (03) 9729 6777 F. (03) 9729 0115

#### NSW/ACT

**QLD** T. (02) 9679 8888  
T. (07) 3200 7555  
**TAS** T. (03) 6334 2992  
**WA** T. (08) 9240 7299

F. (02) 9679 8700

F. (07) 3200 5777

F. (03) 6334 2994

F. (08) 9240 6144

#### SA

**DARWIN**  
**TOWNSVILLE**  
**CAIRNS**

T. (08) 8387 7344

T. (08) 8948 5062

T. (07) 4775 5784

T. (07) 4054 7890

F. (08) 8387 7355

F. (08) 8985 3465

F. (07) 4725 8480

F. (07) 4033 1711