





CONCEPT/PROJECT/SELECT ACRYLIC BATH INSTALLATION INSTRUCTIONS

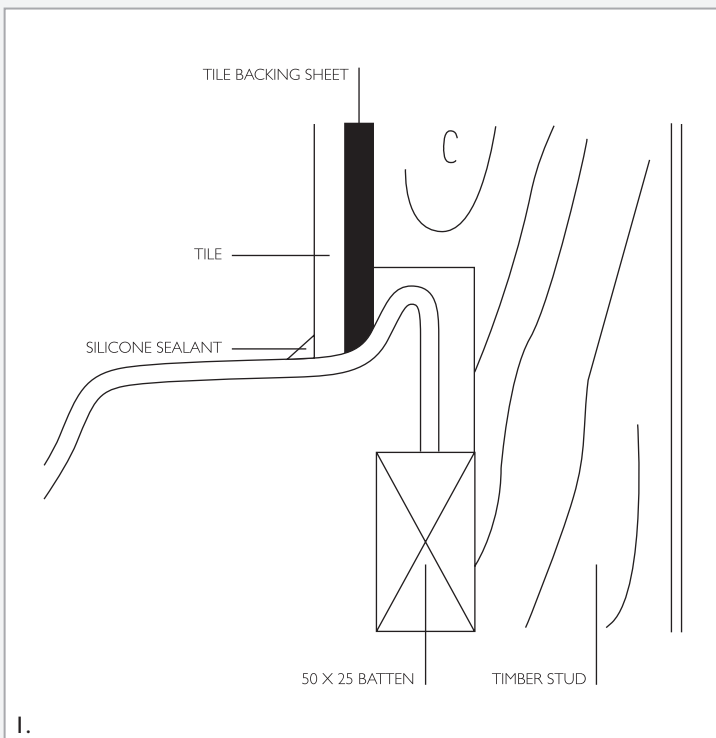

Check that your floor is level and secure. Your Marbletrend bath does not need to be supported by a mortar bed. To adhere your bath to the floor, simply run a generous bead of silicone along the timber support and allow sufficient time to cure. Timber supports must have full contact with floor to achieve correct support for bath.

1. Place bath into position and ensure that the bath is level. The rim around the bath and the base must be fully supported. If the bath is being checked into an adjoining wall, make sure the wall is rebated to a depth that will allow the tiling bead to be checked in.

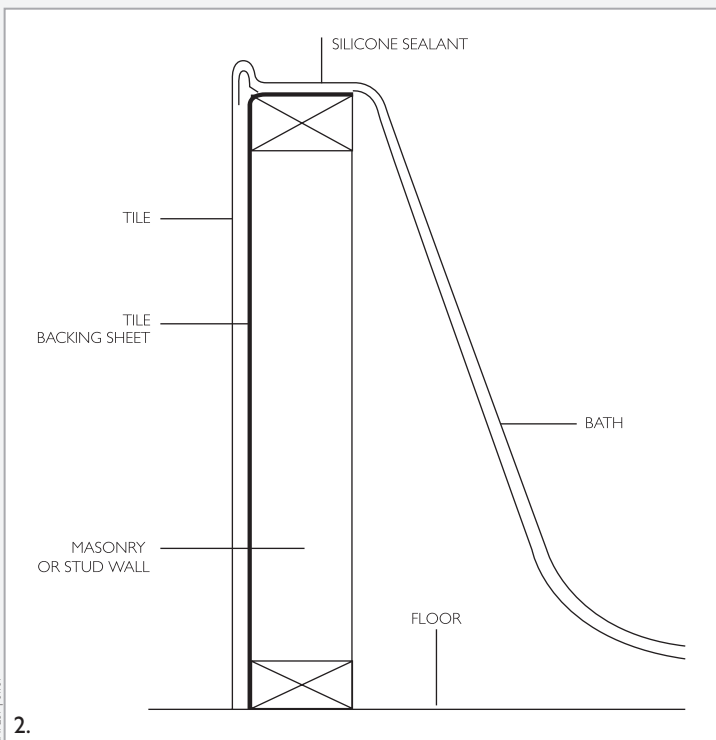

2. The front edge and sides of the bath are to be supported by a mini wall that can be constructed out of timber or masonry.

FAILURE TO FOLLOW OUR INSTALLATION GUIDE WILL VOID THE WARRANTY. CAREFULLY INSPECT YOUR BATH PRIOR TO INSTALLATION AS NO CLAIMS WILL BE ACCEPTED IF THE PRODUCT HAS BEEN INSTALLED.

NB. Specifications are subject to change without prior notice. We recommend that hot water applied to this product does not exceed 55°C.